



Motorola Symbol MC70

The following instruction will give you all the information you need to remove your personal information from your phone. Before recycling your device please also remember to:

- The account for the device has been fully paid and service has been deactivated.
- Any headsets and chargers for the device are included with your donation. (These accessories also contain recyclable and salvageable materials).
- The SIM card is removed if there is one.
- If mailing your used device, be sure that the device and its accessories are packaged in a box or envelope using protective materials and securely attach a label to the box or envelope with its barcode visible.

Data Erasing Instructions

Master Reset:

1. Download the following file: <http://60.242.34.175/mc70/Restore.zip>
2. Extract all files contained within the Restore.zip file to the root directory of the SD or MMC card.
3. Remove the SD Card Slot door of the MC70.
4. Insert the SD or MMC card, making sure it clicks in properly.
5. Hold down the 1 and 9 keys on the keypad.
6. Press the power button and then release all three buttons.

Master Clear:

Simultaneously press the Power button and the 1 and 9 keys.

Call List:

Start > Phone > Call History > Menu > Delete all calls > Yes.